


ONE LAMP EMERGENCY ONLY BALLAST

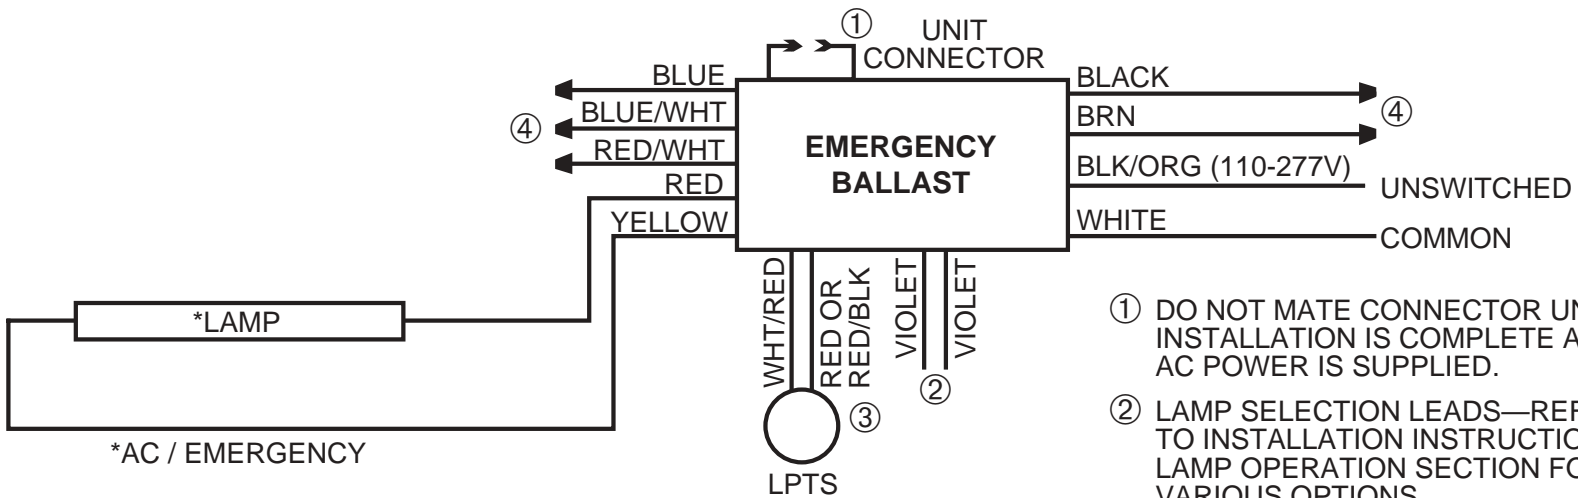

- ① DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.
- ② LAMP SELECTION LEADS—REFER TO INSTALLATION INSTRUCTIONS, LAMP OPERATION SECTION FOR VARIOUS OPTIONS.
- ③ TEST ACCESSORY LEADS-REFER TO INSTALLATION INSTRUCTIONS FOR PROPER POLARITY WIRING.
- ④ CAP UNUSED LEADS.

NOTE: Operating lamps in EMERGENCY MODE ONLY for extended periods of time may reduce lamp life.