


ONE LAMP RAPID START BALLAST

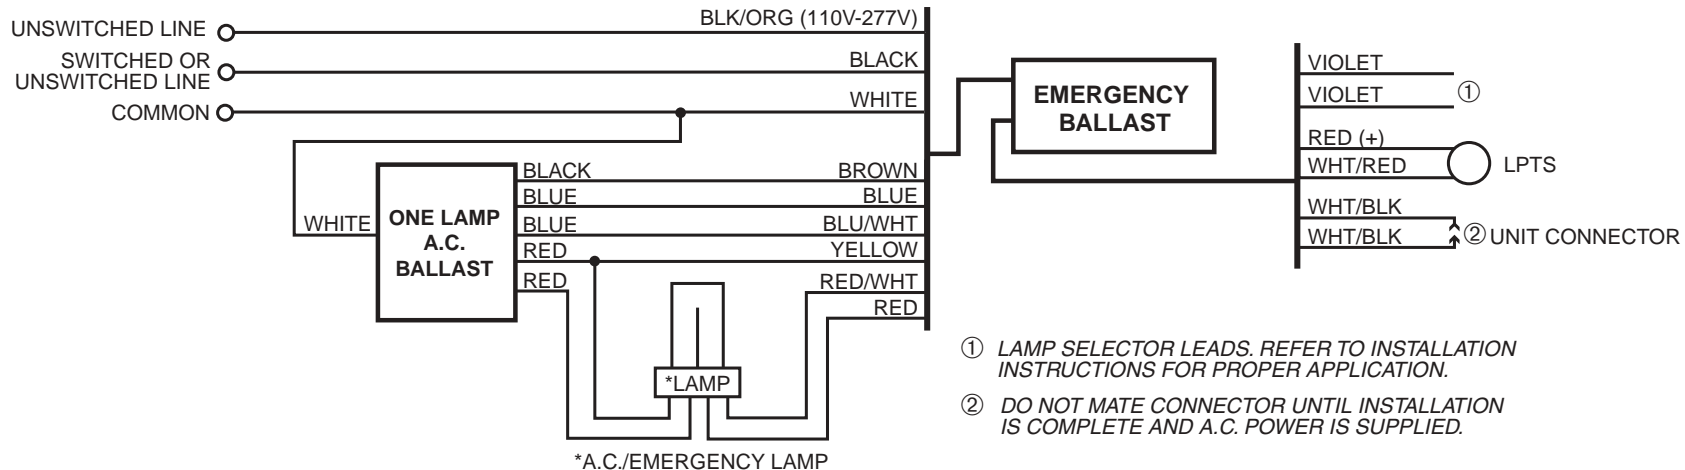

- ① LAMP SELECTOR LEADS. REFER TO INSTALLATION INSTRUCTIONS FOR PROPER APPLICATION.
- ② DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND A.C. POWER IS SUPPLIED.

PHONE (520) 294-3292

FAX (520) 741-2837

WEB www.iotaengineering.com

