


TWO LAMP RAPID START BALLAST WITH ONE LAMP EMERGENCY OPERATION

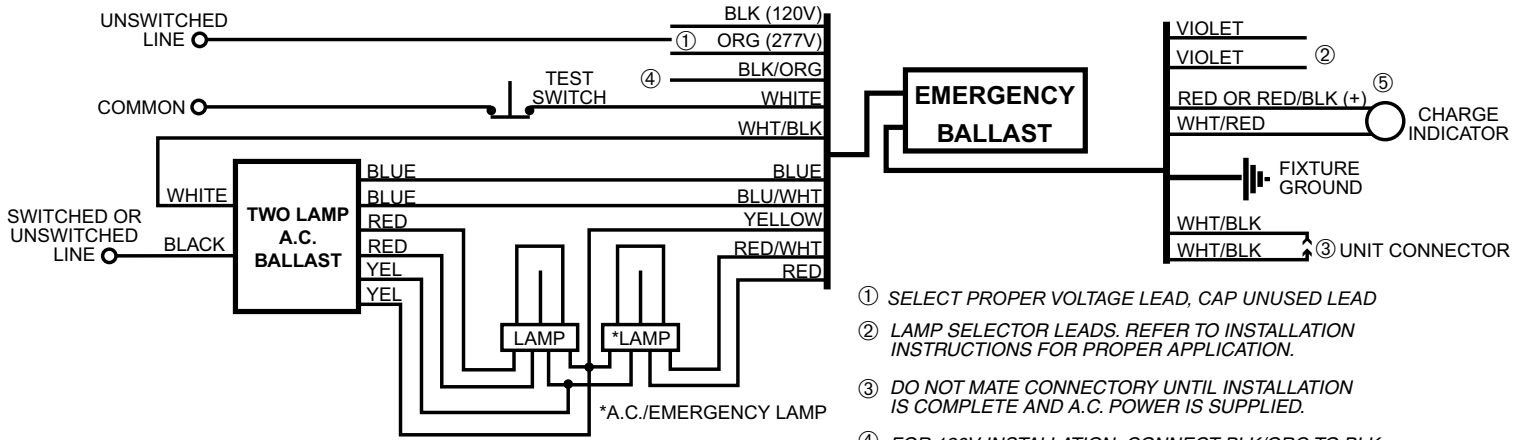

- ① SELECT PROPER VOLTAGE LEAD, CAP UNUSED LEAD
- ② LAMP SELECTOR LEADS. REFER TO INSTALLATION INSTRUCTIONS FOR PROPER APPLICATION.
- ③ DO NOT MATE CONNECTORY UNTIL INSTALLATION IS COMPLETE AND A.C. POWER IS SUPPLIED.
- ④ FOR 120V INSTALLATION, CONNECT BLK/ORG TO BLK. FOR 277V INSTALLATION, CAP BLK/ORG AND BLK SEPARATELY.
- ⑤ TEST ACCESSORY LEADS-REFER TO ISNTALLATION INSTRUCTIONS FOR PROPER POLARITY WIRING.

2LRSB_1LEO_ICE420B

NOTES