


## THREE LAMP INSTANT START BALLAST

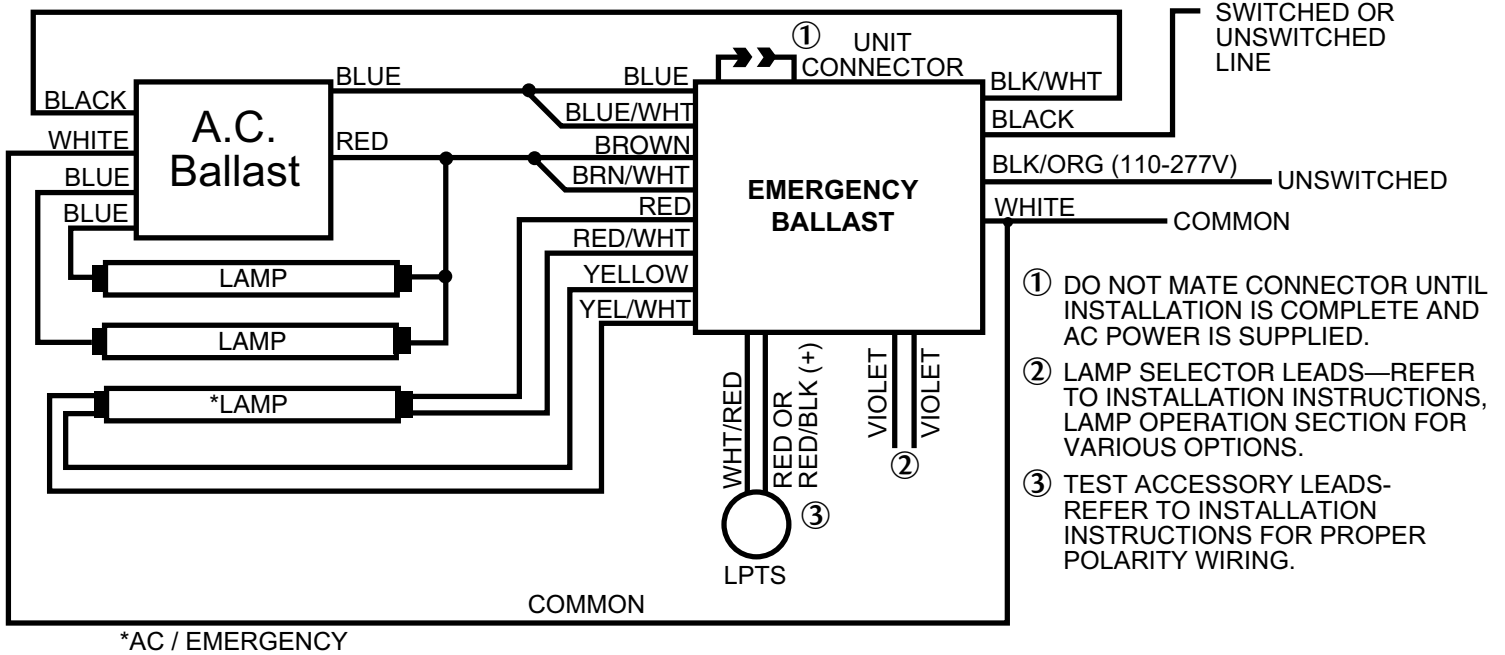

**ATTENTION:** FOR INSTANT START APPLICATIONS, EMERGENCY LAMP SOCKET PINS MUST BE WIRED INDEPENDENTLY FROM EACH OTHER TO AVOID SHORTING THE EMERGENCY OUTPUT CIRCUIT. DO NOT USE INSTANT START SOCKETS FOR THE EMERGENCY LAMP.

ISD80AC\_7

### NOTES

Wiring and Troubleshooting Tips are available on-line at <http://www.iotaengineering.com/wiringtips.pdf>

