


FOUR LAMP INSTANT START BALLAST

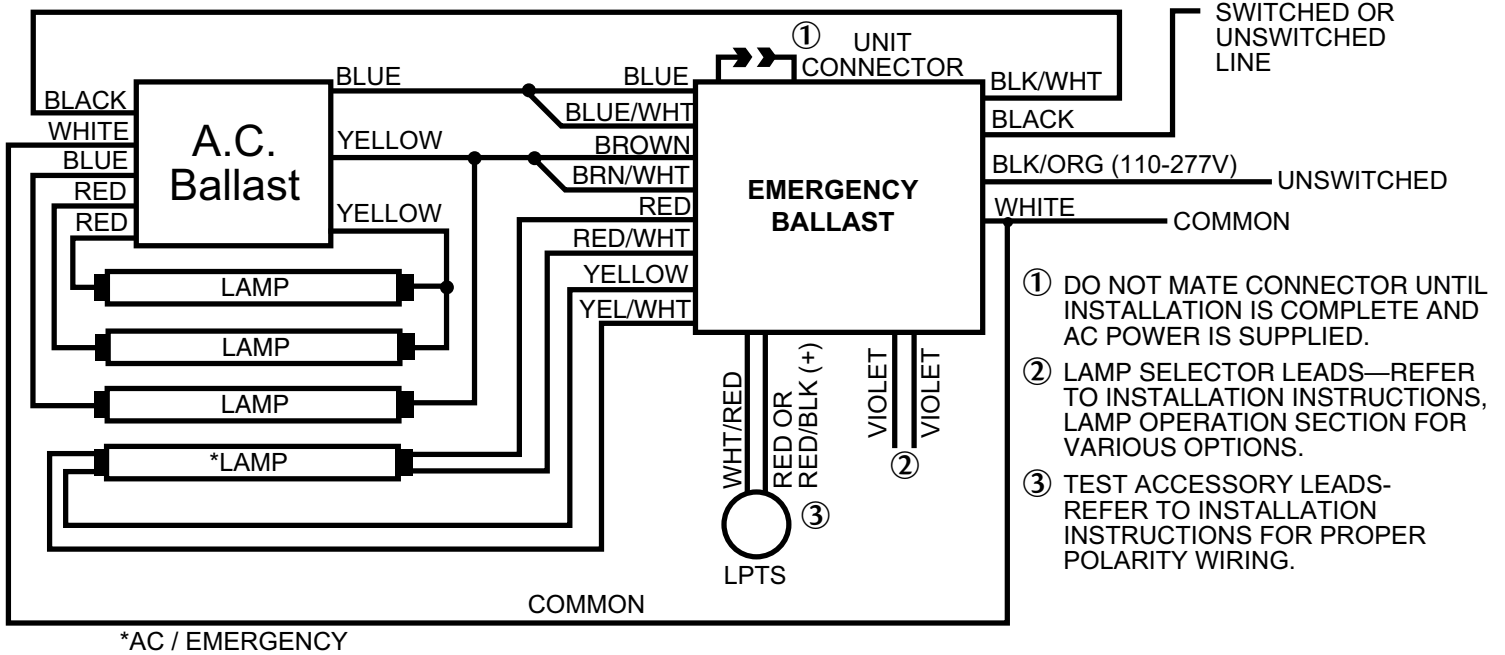

ATTENTION: FOR INSTANT START APPLICATIONS, EMERGENCY LAMP SOCKET PINS MUST BE WIRED INDEPENDENTLY FROM EACH OTHER TO AVOID SHORTING THE EMERGENCY OUTPUT CIRCUIT. DO NOT USE INSTANT START SOCKETS FOR THE EMERGENCY LAMP.

ISD80AC_8

NOTES

Wiring and Troubleshooting Tips are available on-line at <http://www.iotaengineering.com/wiringtips.pdf>

