ONE LAMP INSTANT START BALLAST

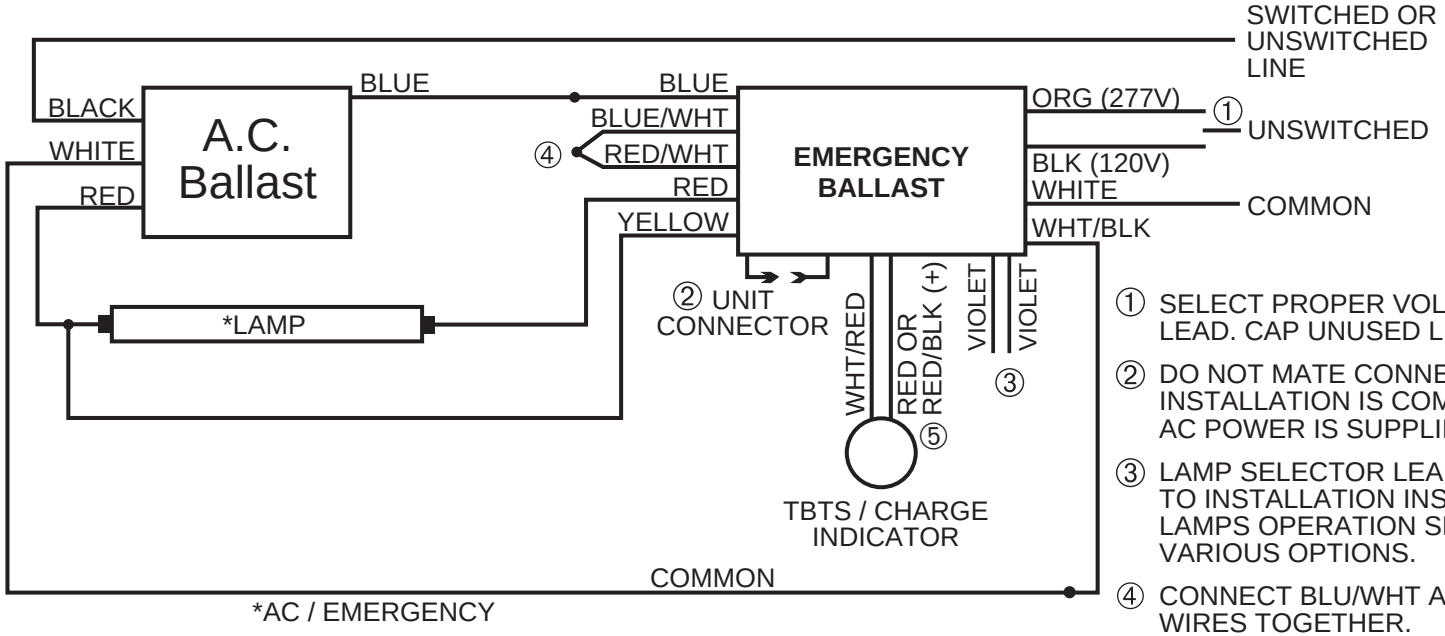

① SELECT PROPER VOLTAGE LEAD. CAP UNUSED LEAD.

② DO NOT MATE CONNECTOR UNTIL INSTALLATION IS COMPLETE AND AC POWER IS SUPPLIED.

③ LAMP SELECTOR LEADS—REFER TO INSTALLATION INSTRUCTIONS, LAMPS OPERATION SECTION FOR VARIOUS OPTIONS.

④ CONNECT BLU/WHT AND RED/WHT WIRES TOGETHER.

⑤ TEST ACCESSORY LEADS—REFER TO INSTALLATION INSTRUCTIONS FOR PROPER POSITIVE LEAD WIRING.

IOTA ENGINEERING L.L.C.
PHONE (520)-294-3292 FAX (520) 741-2837 WEB www.iotaengineering.com